


INSTALLATION ON A CONCRETE SLAB USING ECOLLABO8 ECOPLANKS



Prepare the Concrete Slab

Ensure the concrete slab is level, clean, and dry. A stable, even surface prevents shifting and enhances EcoPlank durability.

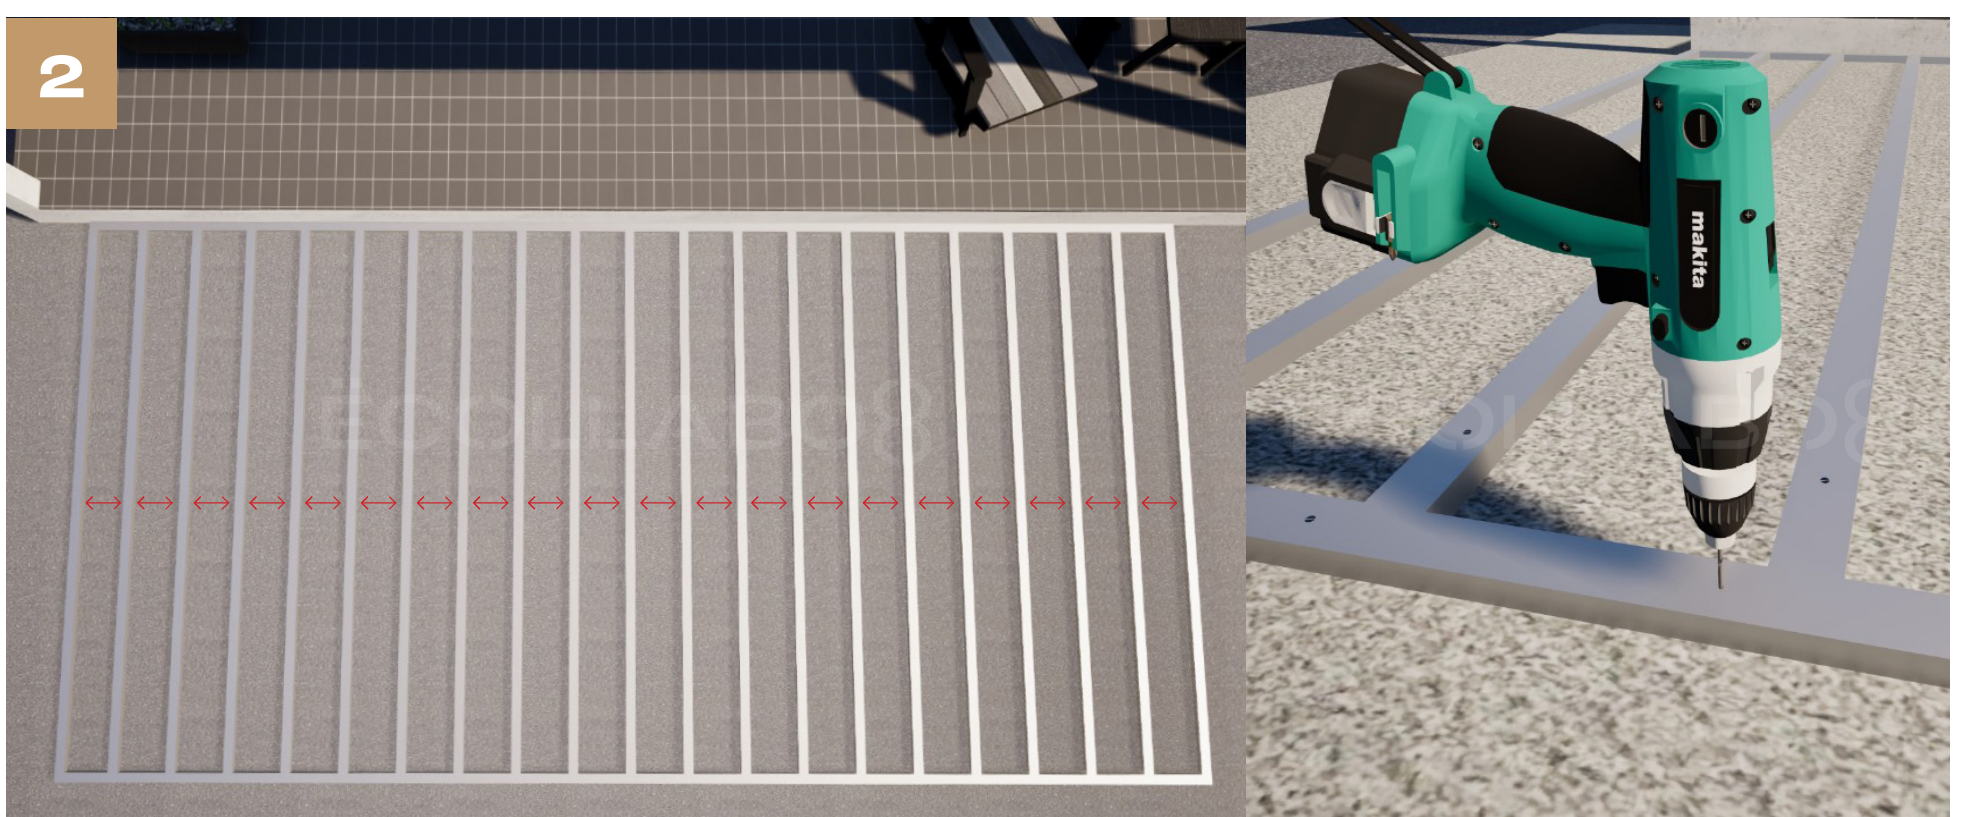

Position and Space Joists

Lay the joists (Joist 5 cm wide) across the slab with **25 cm spacing from edge to edge.** (22,5 for the First and last joist) This spacing provides the necessary support to prevent flexing in the EcoPlanks.



Install Starting Clips

Secure starting clips along the edge where the first EcoPlank will be installed, aligning them precisely to set a straight foundation.



Lay the First EcoPlank

- Place the first EcoPlank into the starting clips, ensuring it sits straight and level.
- **Note:** ECOLLABO8 EcoPlanks have a thickness tolerance of ± 1 mm. If a plank appears uneven, use the small spacers provided by ECOLLABO8 under the plank to level it as needed, ensuring a smooth deck surface.



Secure EcoPlanks with Clips

- Position clips between each plank to maintain a consistent 3–5 mm gap. This gap allows for necessary expansion and ventilation.
- As you proceed, double-check for evenness and add spacers as required to keep each plank flush with the others.



Finish with Starting Clips on the Final Edge

Secure the final EcoPlank with starting clips on the outer edge to complete the perimeter neatly.



Cover Exposed Edges with EcoPlank Fascia

Finish by attaching fascia boards or EcoPlanks along any exposed sides, fastening them to the joists for a polished, professional look.



Final Step: Smooth Finishing

Sand the decking surface with 80-grit sandpaper until it's smooth and clean, achieving a flawless, polished finish. No coating or varnish required.